


HMOUNT SHROUD (HM1)

Traditional shroud on any helmets.
Designed for universal compatibility
with most NVG mounts.

Foliage
Green

Black

Urban
Tan

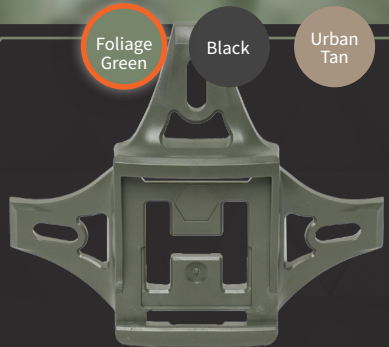

INSTALLATION

STEP 1

Remove the front pad from the helmet.

STEP 2

Position the 3-hole HMOUNT shroud(HM1) mount over the corresponding three holes of the helmet. (as shown in Figure 1).

STEP 3

Once the helmet mount is in position, insert the 3 screws, included in pack (Stainless-Steel 304), into the 3 - holes from the inner side of the helmet outwards (as shown in Figure 2).

Please note: the length of the screws depends on helmet thickness, make sure screw head is not protruding and remains flat.

STEP 4

Place the 3 corresponding nuts using a matching Hex-Driver/Allen key to tighten. Avoid over-tightening the screws. Replace the front pad helmet back into its position.



Figure 1

Figure 2

Images may differ from the actual product

HMOUNT BY
TAR

TO LEARN MORE ABOUT HMOUNT

• www.tarideal.com/hmount

HMOUNT SHROUD

(HM1)

HMOUNT PORTFOLIO

- **HM1** Traditional shroud, ultra light weight, designed for universal compatibility with most NVG devices.

- **HM2** System allows simultaneously mounting of numerous accessories on the front and the back of almost any military & law enforcement boltless helmets.

- **HM3** is the latest HMOUNT boltless helmet mounting system. Modular links to attach any accessory. one size to fit any helmet with rapid attachment, light weight and secure.

